


Porta-Quad Build Instructions

Here are the parts you should receive. - Note, as the design is constantly being improved, you may receive slightly different parts.



Step 1

Use the 8mm M3 bolts to bolt in the vibration dampeners like shown in the picture bellow:

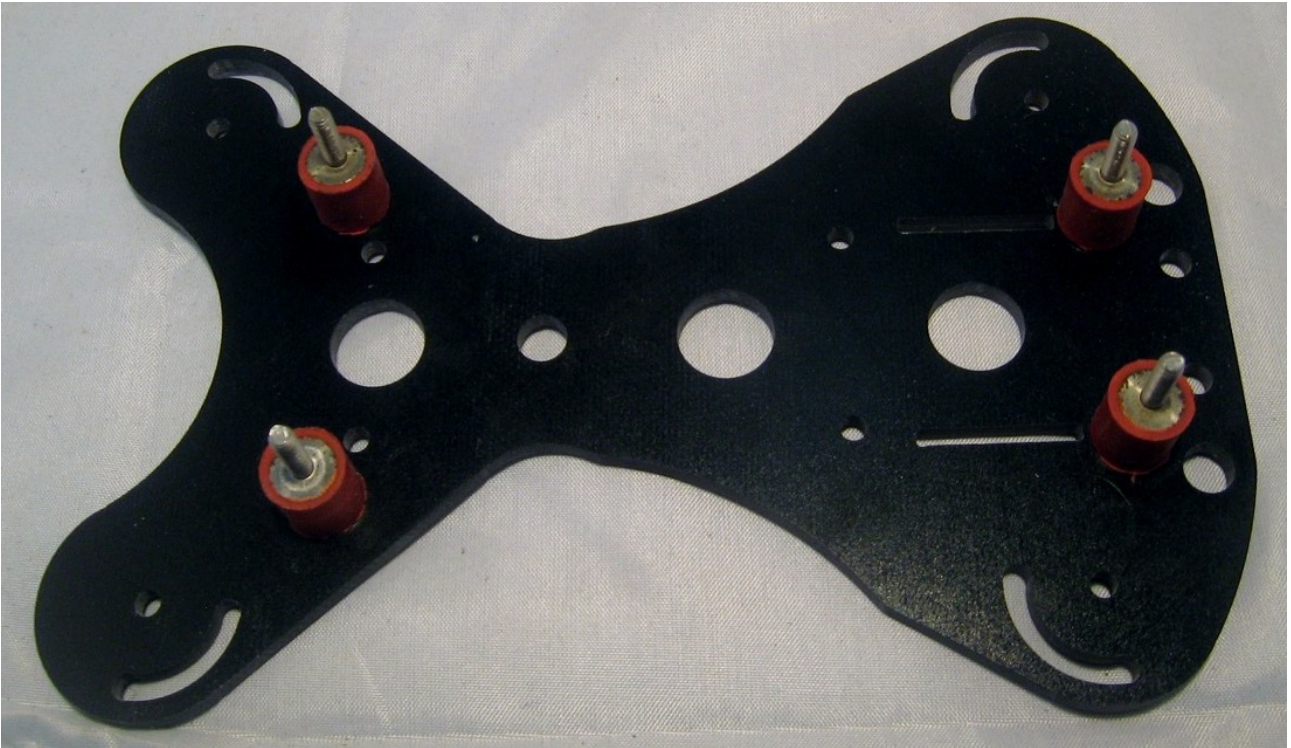


Step 2

Using the 10mm M3 bolts and M3 lock nuts. Attach the arms as shown below.



Step 3

Next, slide the spring washers over the 12mm M3 bolts, insert them into the arms then add the wing nut to the top.

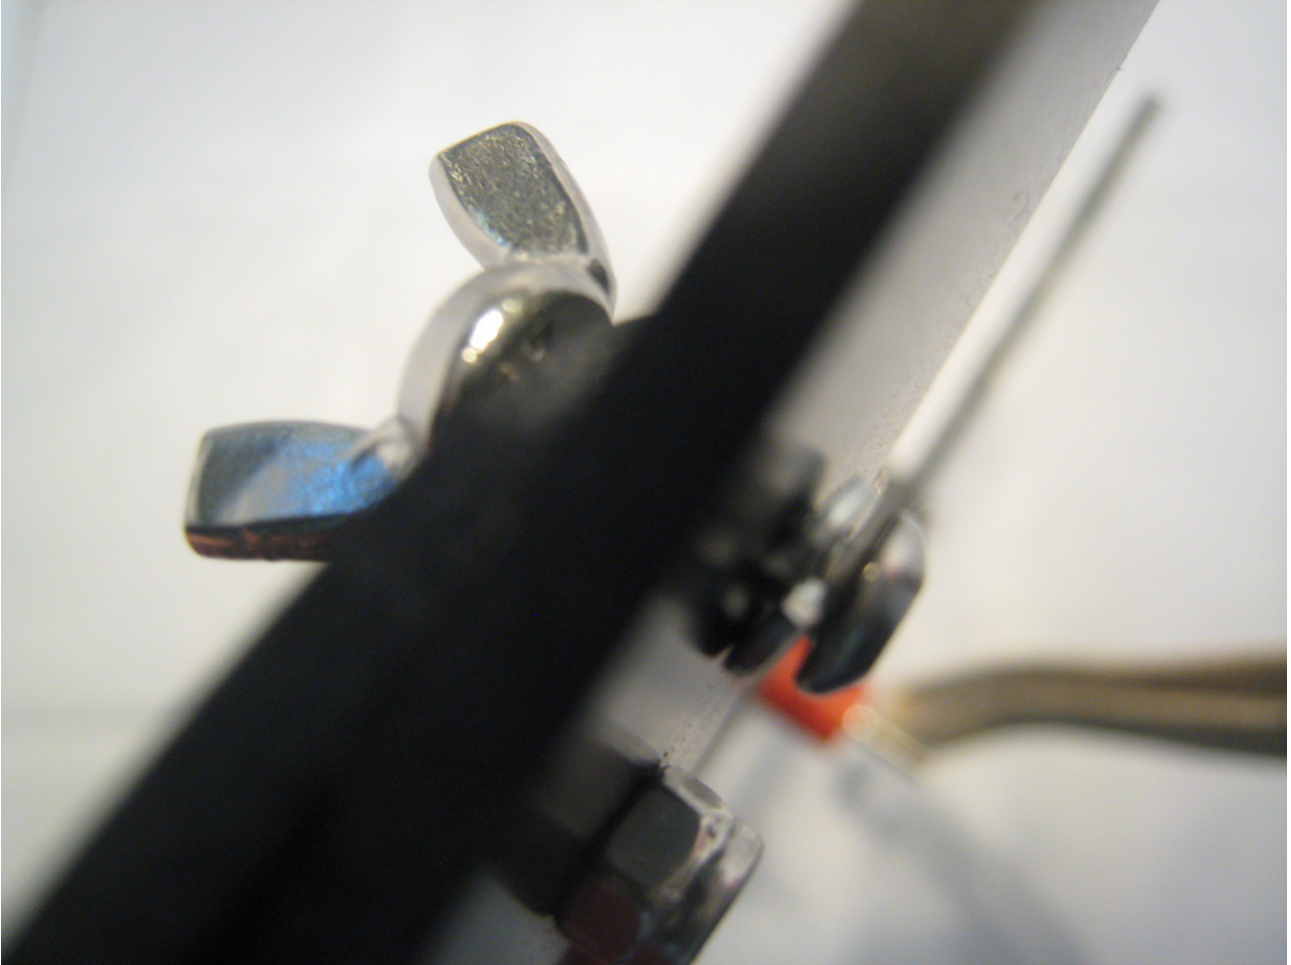

Step 4

Next, build up the pylons like shown.

First add a small nut/spacer onto the vibration dampeners.

Then add the tall metal stand offs.

Then add the smaller plastic break away stand offs.



Step 5

Now, add the bottom plate as shown, and use the remaining nuts to hold it in place.



You should now have an assembled Porta-Quad Frame!

